


Instructions:

- (1) Print and cut along dotted red line.
- (2) Verify printed measurements with a ruler.
- (3) Place template into wheel bore as shown in picture (it may help to use thick paper or cardboard backing).
- (4) Use thick paper or cardboard backing).
- (5) A minimum of 2mm clearance between the caliper and the wheel is recommended.

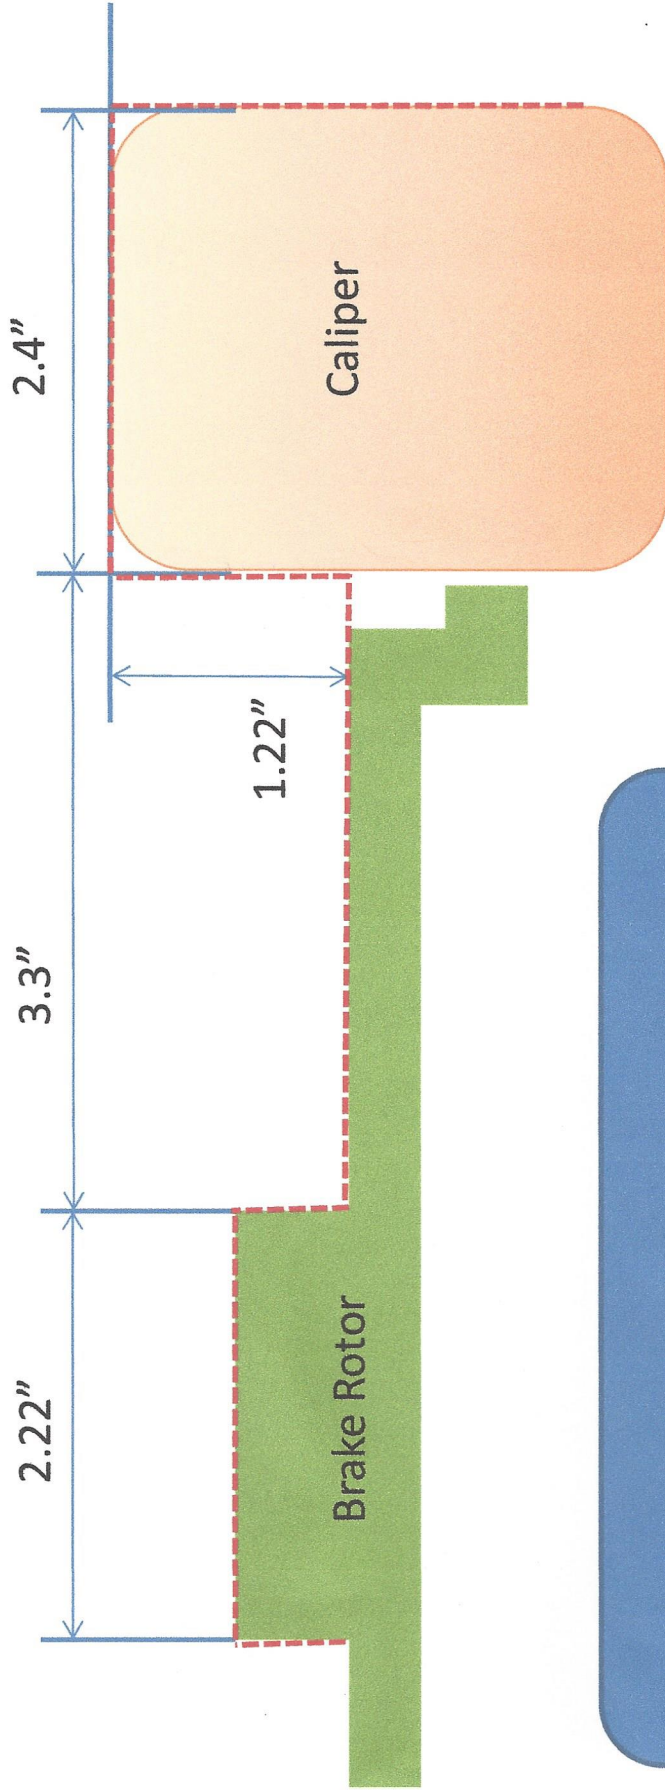

RR-Racing **Stage 0 Sport**
Performance BRZ/FRS Big Brake Kit
Wheel Fitment Template